EDIMAX
NETWORKING PEOPLE TOGETHER

SP-1101W

User Manual

12-2013 / v1.1

Edimax Technology Co., Ltd.
No.3, Wu-Chuan 3rd Road, Wu-Gu, New Taipei City 24891, Taiwan
Email: support@edimax.com.tw

Edimax Technology Europe B.V.
Nijverheidsweg 25, 5683 CJ Best, The Netherlands
Email: support@edimax.nl

Edimax Computer Company
3350 Scott Blvd., Bldg.15 Santa Clara, CA 95054, USA
Live Tech Support: 1(800) 652-6776
Email: support@edimax.com

Copyright @ Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. For more information about this product, please refer to the user manual on the CD-ROM. The software and specifications are subject to change without notice. Please visit our website www.edimax.com for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Edimax Technology Co., Ltd.
Add: No. 3, Wu-Chuan 3rd Rd., Wu-Ku Industrial Park, New Taipei City, Taiwan
Tel: +886-2-77396888
Email: sales@edimax.com.tw

Notice According to GNU General Public License Version 2

Certain Edimax products include software code developed by third parties, software code is subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). Please see the **GNU** (www.gnu.org) and **LPGL**(www.gnu.org) Websites to view the terms of each license.

The GPL Code and LGPL Code used in Edimax products are distributed without any warranty and are subject to the copyrights of their authors. For details, see the GPL Code and LGPL Code licenses. You can download the firmware-files at http://www.edimax.com under "Download" page.

I. Informations sur le produit 1
I-1. Contenu de l'emballage 1
I-2. Panneau avant 1
I-3. État du voyant 2
I-4. Bouton d'état de l'interrupteur 2
I-5. Étiquette du produit 3
I-6. Réinitialisation 3
II. Installation du matériel 4
III. Configuration de la prise intelligente 5
III-1 Télécharger l'application EdiPlug 5
III-2. Installer une prise intelligente 6
- iOS 6
- Android 8

III-3 Changer le nom et le mot de passe de la prise intelligente 10
- iOS 10
- Android 11

III-4 Ajouter une prise intelligente existante à l'écran principal 12
- iOS 12
- Android 13

III-5 Configurer une programmation 14
- iOS 14
- Android 16

III-6 Notification 19
- iOS 19
- Android 22

III-7 Supprimer la prise intelligente de la liste principale 25
- iOS 25
- Android 25

III-8 Réinitialisation des paramètres par défaut 26
- iOS 26
- Android 27

III-9 Mise à niveau du Micro-programme 27

I. Informations sur le produit

I-1. Contenu de l'emballage

Prise intelligente commutée

Guide d'installation rapide

CD avec manuel de l'utilisateur

I-2. Panneau avant

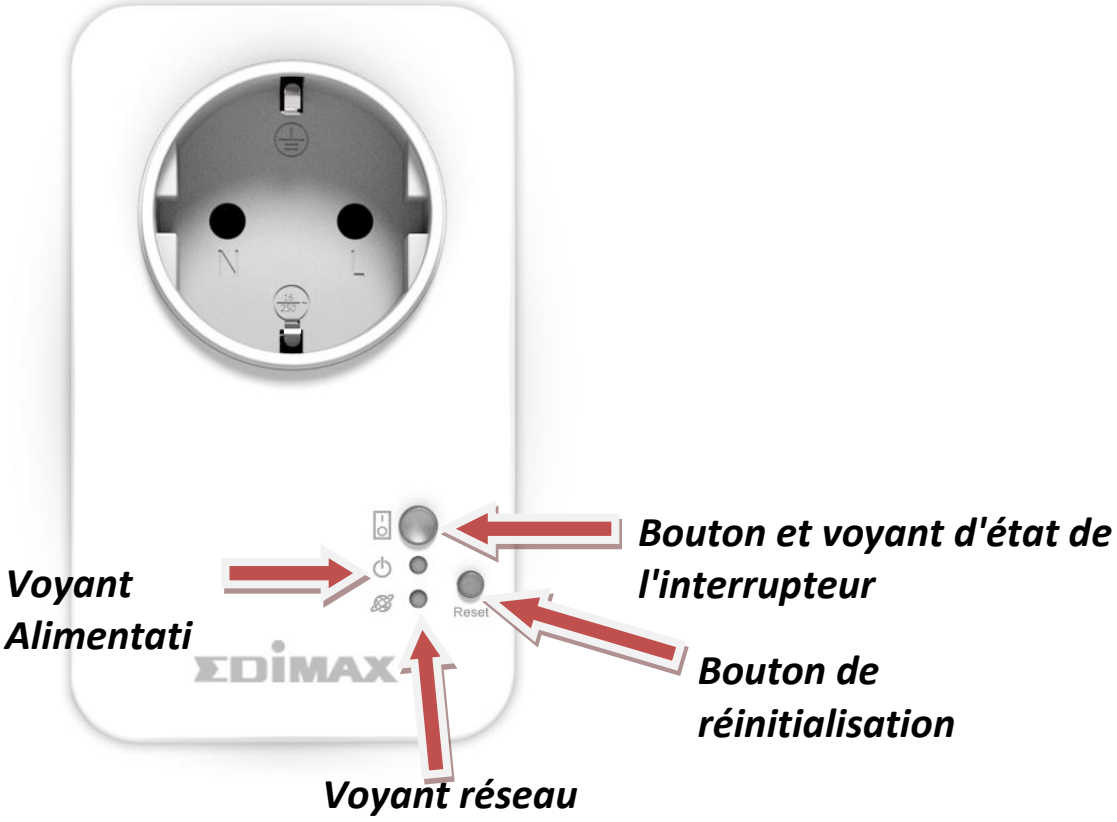

I-3. État du voyant

Voyant	Couleur	État	Descriptif
État de l'interrupteur	**Vert**	Activé	La sortie d'alimentation de la prise intelligente est activée.
		Désactivé	La sortie d'alimentation de la prise intelligente est désactivée.
Alimentation	**Vert**	Activé	La prise intelligente est alimentée.
		Désactivé	La prise intelligente est arrêtée.
Réseau	**Rouge**	Clignote rapidement	La prise intelligente démarre ou redémarre.
		Clignote lentement (1 fois par seconde)	La prise intelligente est en mode installation et prête pour la configuration.
	Vert	Activé	La prise intelligente est connectée au réseau sans fil et au nuage.
		Clignote lentement (1 fois par seconde)	La prise intelligente est connectée au réseau sans fil, masi pas au nuage.
		Désactivé	Aucune connexion réseau.

Après al configuration, le voyant réseau doit être** allumé **et** **vert** **afin que l'application EdiPlug fonctionne à distance, c'est-à-dire à partir d'une connexion à Internet différente de celle de votre prise intelligente.

I-4. Bouton d'état de l'interrupteur

Le bouton d'état de l'interrupteur, situé en façade de votre prise intelligente (voir **I-2.**), permet de mettre en marche/arrêter la sortie d'alimentation de votre prise intelligente. Vous pouvez mettre en marche/arrêter n'importe quel appareil raccordé à votre prise intelligente avec ce bouton. Le bouton s'allume en **vert** pour indiquer la **mise en marche** (voir **I-3**).

I-5. Étiquette du produit

L'étiquette du produit se trouve à l'arrière de la prise intelligente commutée et indique la puissance d'entrée/sortie, ainsi que le mot de passe par défaut de votre prise intelligente. Le mot de passe doit être modifié lorsque vous avez terminé l'opération d'installation pour des raisons de sécurité. Le mot de passe est nécessaire pour accéder à la prise intelligente commutée à distance.

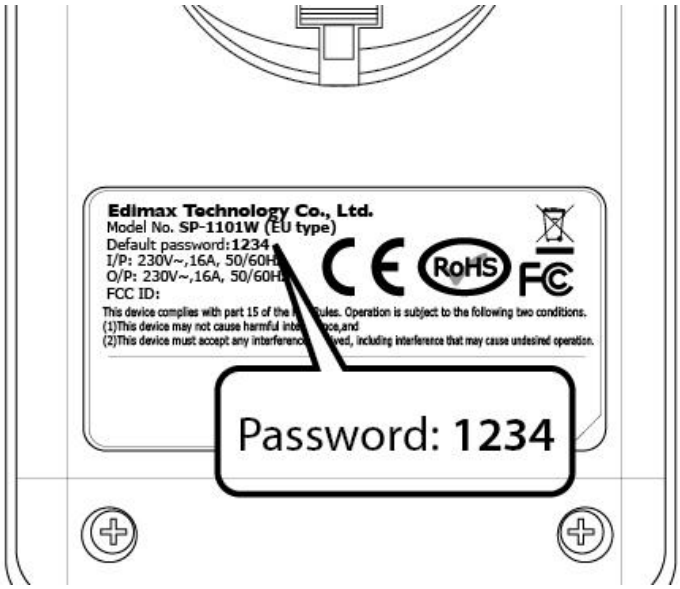

I-6. Réinitialisation

Si vous rencontrez des problèmes avec votre prise intelligente, vous pouvez réinitialiser les paramètres d'usine par défaut de la prise intelligente. Cela réinitialise **tous** les paramètres aux valeurs par défaut, dont le mot de passe de la prise intelligente.

1. Maintenez enfoncé le bouton de réinitialisation à l'avant de la prise intelligente pendant au moins 10 secondes

2. Relâchez le bouton lorsque le voyant réseau **clignote rapidement en rouge.**

3. Attendez que la prise intelligente redémarre. La prise intelligente est prête lorsque le voyant réseau **clignote lentement en rouge** pour indiquer le **mode installation**.

II. Installation du matériel

Pour les instructions d'installation ci-dessous assurez-vous que votre prise intelligente est correctement branchée et prête pour la configuration.

Si vous devez configurer plusieurs prises intelligentes, ne branchez et ne configurez qu'une seule prise intelligente à la fois.

1. Branchez la prise intelligente dans une prise de courant.

2. Patientez quelques instants que la prise intelligente démarre. La prise intelligente est prête pour la configuration lorsque le voyant réseau **clignote lentement en rouge** pour indiquer le **mode installation**.

Si le voyant réseau de votre prise intelligente n'indique pas le mode installation, essayez de réinitialiser la prise intelligente (voir I-6).

3. Lorsque vous voyez le voyant réseau de la prise intelligente indiquer le mode installation, passez à la section **III. Configuration de la prise intelligente** pour configurer votre prise intelligente à l'aide de l'application gratuite pour smartphone EdiPlug**.**

III. Configuration de la prise intelligente

III-1 Télécharger l'application EdiPlug

Pour configurer votre prise intelligente avec l'application pour smartphone EdiPlug, veuillez télécharger l'application EdiPlug et suivre les instructions d'installation pour iOS ou Android. Après l'installation, vous pouvez utiliser l'application EdiPlug pour mettre en marche/arrêter votre prise intelligente à distance depuis n'importe quel smartphone avec une connexion à Internet, ainsi que configurer la planification automatique et les notifications par e-mail.

1. Dans la boutique Apple App Store ou Google Play, recherchez « EdiPlug ».

2. Téléchargez et installez l'application.

3. Suivez les instructions appropriées ci-dessous pour iOS ou Android.

III-2. Installer une prise intelligente

- **iOS**

Suivez les instructions ci-dessous pour ajouter une nouvelle prise intelligente à l'application EdiPlug sur iOS :

Vous devez vous trouver dans la portée Wi-Fi de la prise intelligente. Si vous disposez de plusieurs prises intelligentes, ne branchez et ne configurez qu'une seule prise à la fois.

1. Recherchez et connectez-vous au réseau Wi-Fi appelé « EdiPlug.Setup », comme indiqué ci-dessous :

2. Ouvrez l'application EdiPlug et sélectionnez votre réseau Wi-Fi dans la liste, comme indiqué ci-dessous :

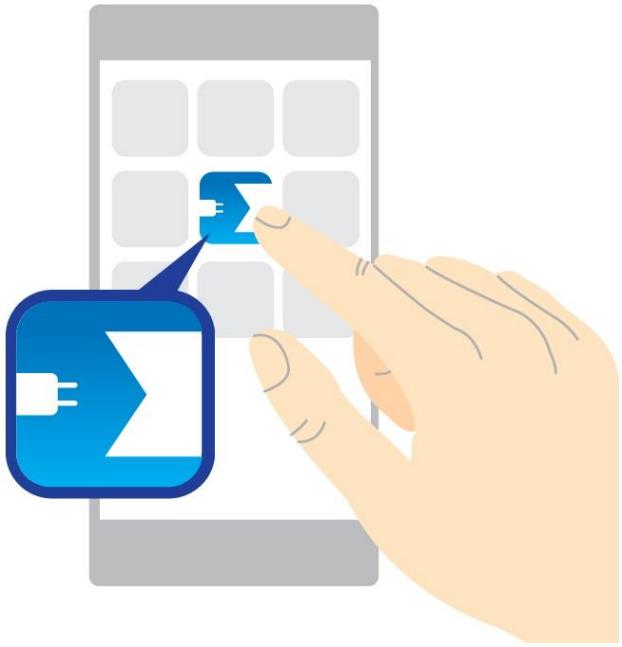

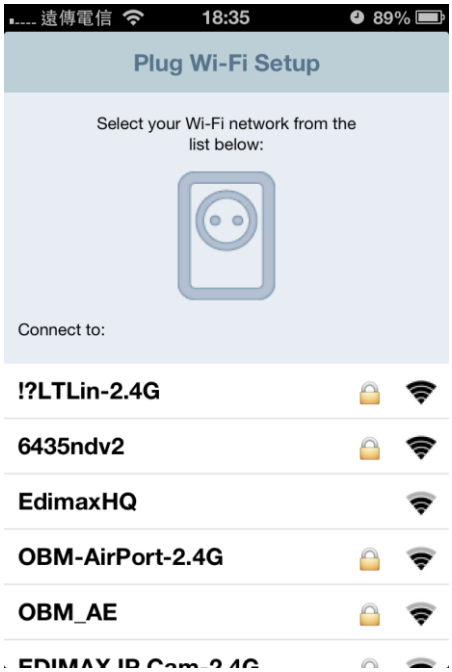

3. Saisissez votre mot de passe Wi-Fi et touchez « OK ». L'écran suivant indiquera que la configuration est terminée !

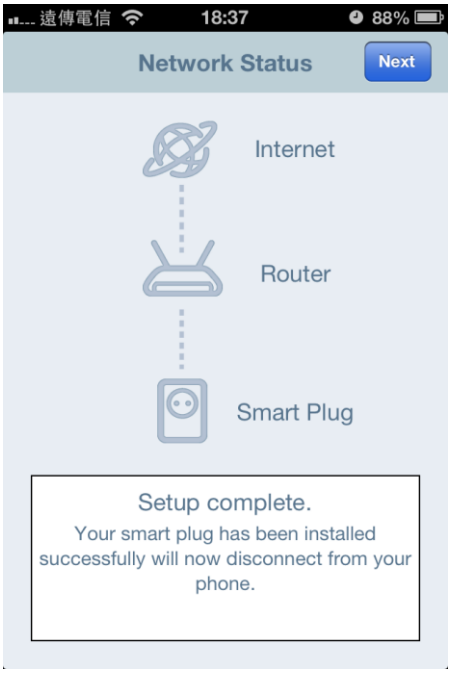

4. Votre prise intelligente sera maintenant affichée sur l'écran principal d'EdiPlug. Faites glisser l'interrupteur pour mettre en marche ou arrêter votre prise intelligente (et tout appareil électrique qui y est branché).

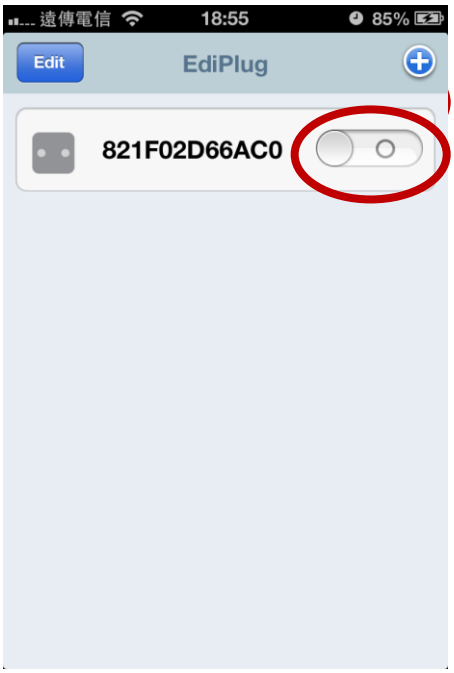

5. Le voyant réseau de la prise intelligente doit être **allumé** et **vert** pour indiquer une connexion réussie au réseau et au cloud. Vous pouvez utiliser l'application EdiPlug pour contrôler votre prise intelligente à distance depuis n'importe quelle connexion à Internet.

- **Android**

Suivez les instructions ci-dessous pour ajouter une nouvelle prise intelligente à l'application EdiPlug sur Android :

Vous devez vous trouver dans la portée Wi-Fi de la prise intelligente. Si vous disposez de plusieurs prises intelligentes, ne branchez et ne configurez qu'une seule prise à la fois.

1. Ouvrez l'application EdiPlug et touchez l'icône « + » en haut à droite de l'écran.

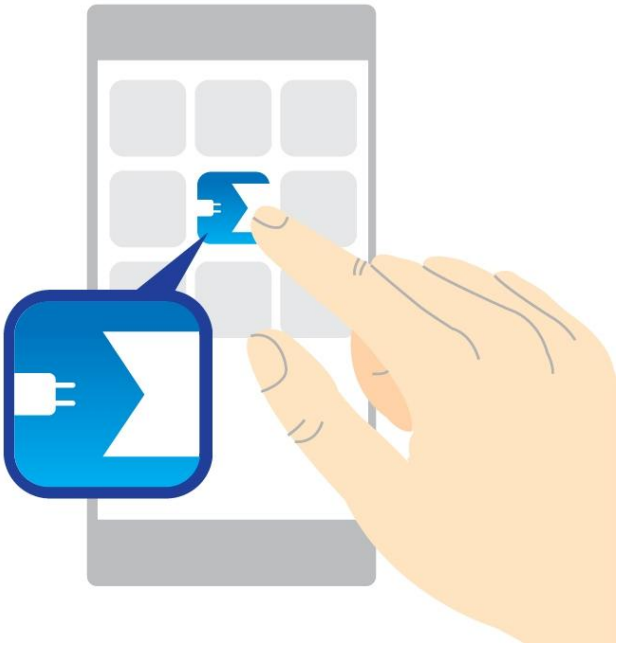

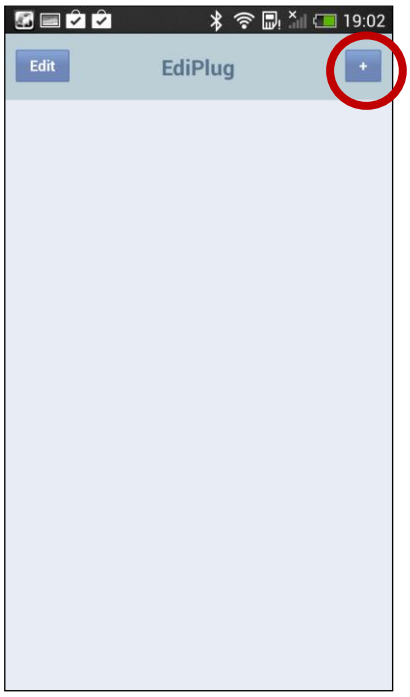

2. Touchez « Installer une nouvelle prise » et sélectionnez votre réseau Wi-Fi dans la liste, comme indiqué ci-dessous.

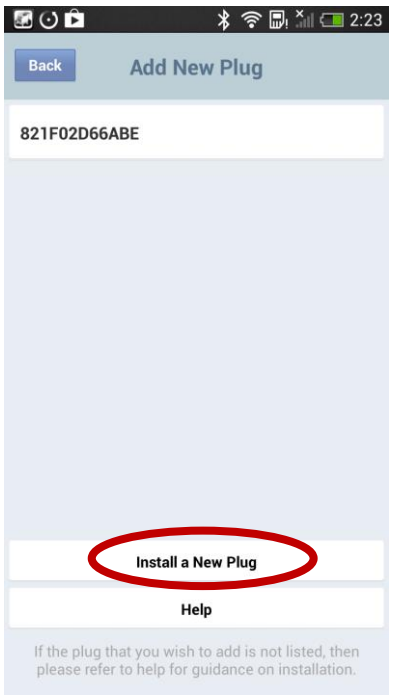
2:23
Back
Add New Plug
821F02D66ABE
Install a New Plug
Help
If the plug that you wish to add is not listed, then please refer to help for guidance on installation.

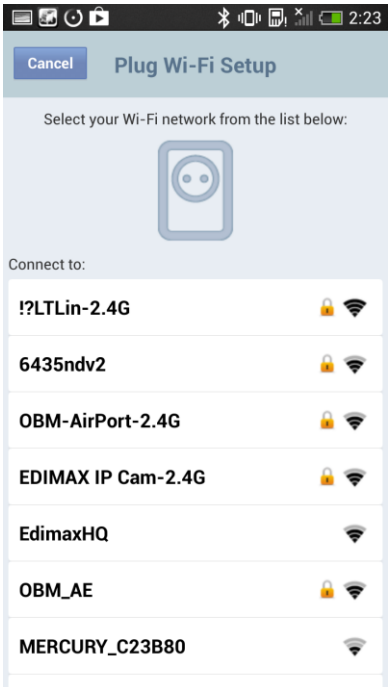

3. Saisissez votre mot de passe Wi-Fi et touchez « OK ». L'écran suivant indiquera que la configuration est terminée !

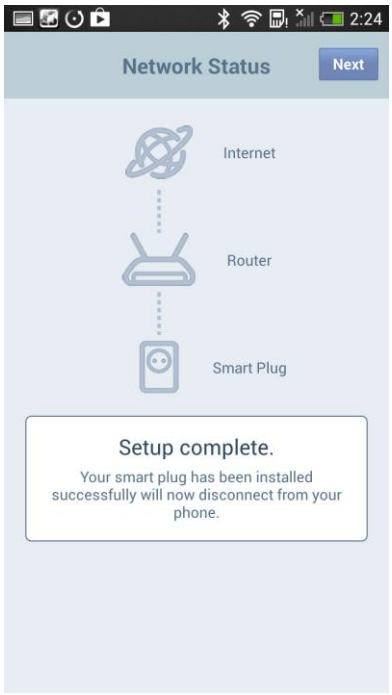

4. Votre prise intelligente sera maintenant affichée sur l'écran principal d'EdiPlug. Faites glisser l'interrupteur pour mettre en marche ou arrêter votre prise intelligente (et tout appareil électrique qui y est branché).

5. Le voyant réseau de la prise intelligente doit être **allumé** et **vert** pour indiquer une connexion réussie au réseau et au cloud. Vous pouvez utiliser l'application EdiPlug pour contrôler votre prise intelligente à distance depuis n'importe quelle connexion à Internet.

III-3 Changer le nom et le mot de passe de la prise intelligente

- **iOS**

1. Sélectionnez « Modifier »dans l'écran principal d'EdiPlug, puis sélectionnez la prise intelligente que vous voulez modifier dans la liste.

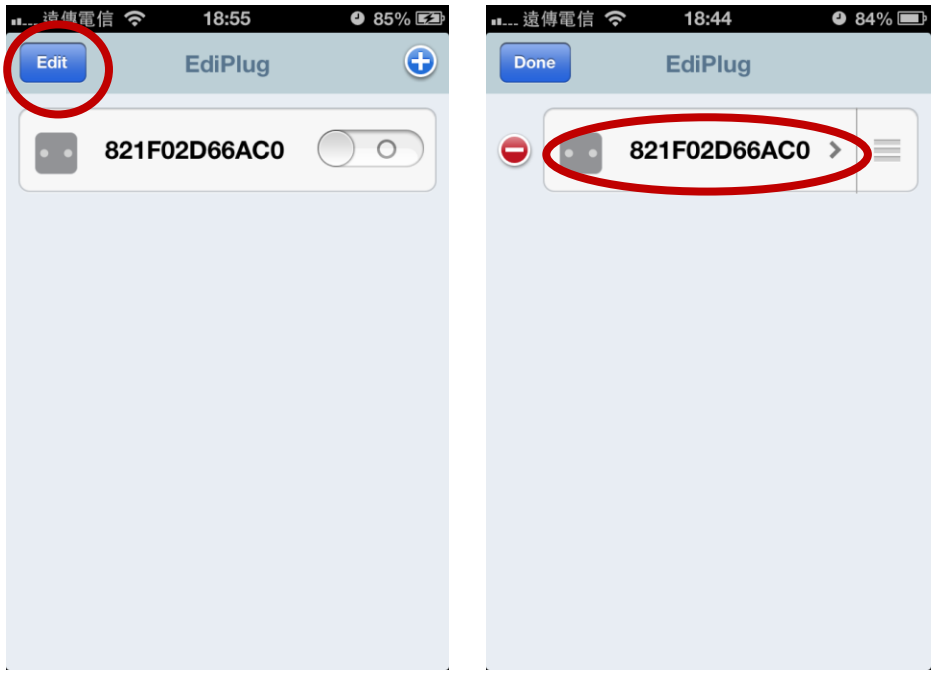

2. Saisissez un nouveau nom et un nouveau mot de passe pour votre prise intelligente et touchez « Retour » pour revenir à l'écran principal. Votre prise intelligente sera maintenant affichée avec son nouveau nom.

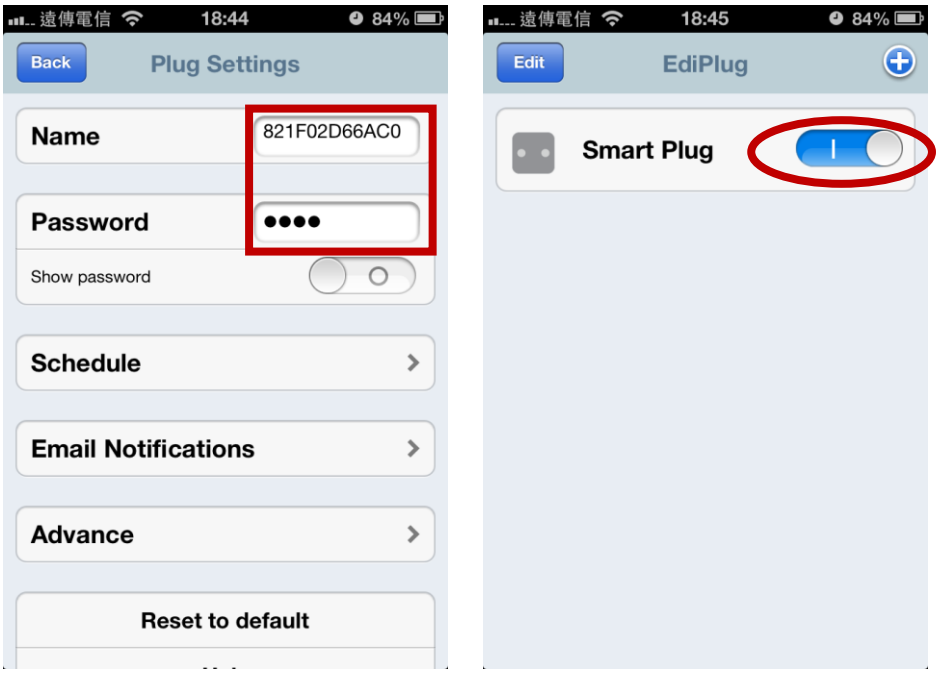

- **Android**

1. Sélectionnez « Modifier »dans l'écran principal d'EdiPlug, puis sélectionnez la prise intelligente que vous voulez modifier dans la liste.

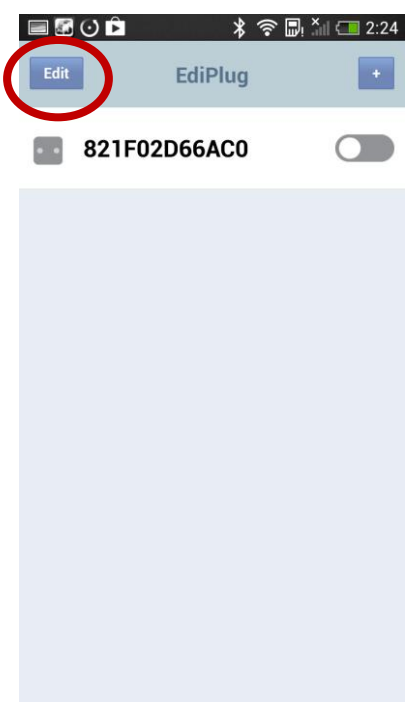

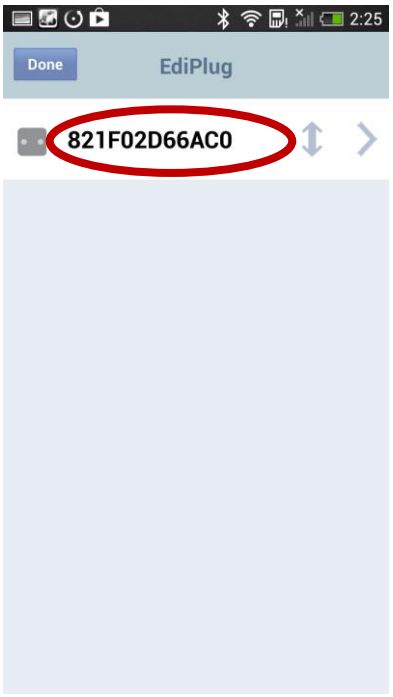

2. Saisissez un nouveau nom et un nouveau mot de passe pour votre prise intelligente et touchez « Retour » pour revenir à l'écran principal. Votre prise intelligente sera maintenant affichée avec son nouveau nom.

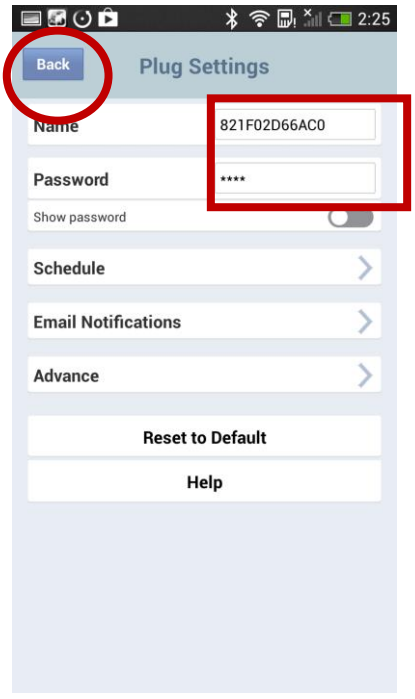

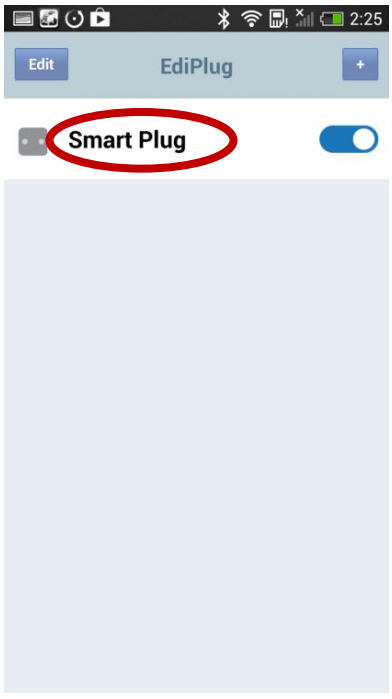

III-4 Ajouter une prise intelligente existante à l'écran principal

- **iOS**

1. Dans l'écran principal d'EdiPlug, touchez l'icône « + » en haut à droite et sélectionnez une prise dans la liste.

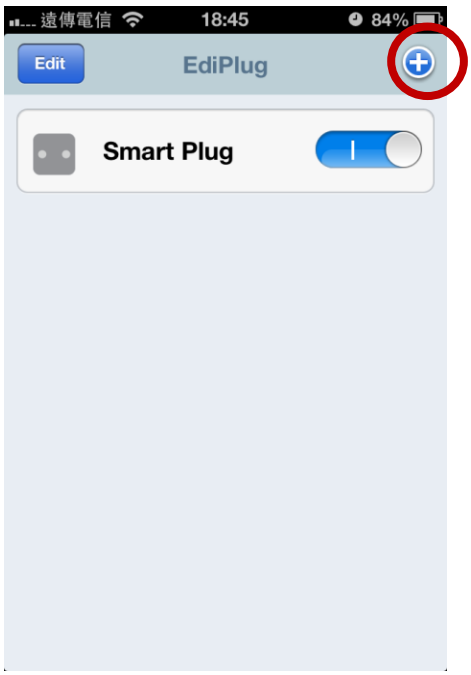

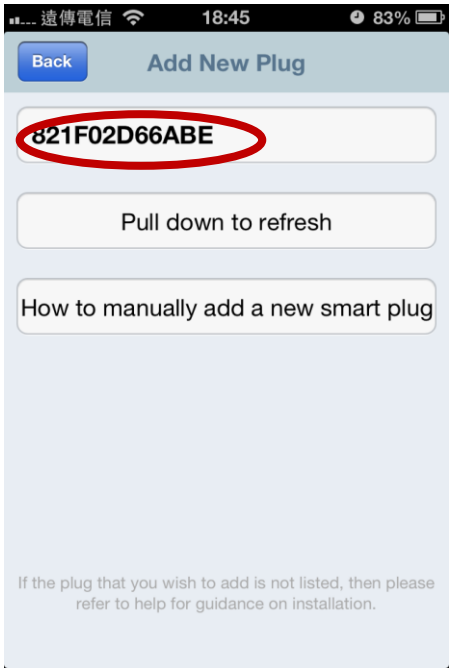
遠傳電信 18:45 83%
Back
Add New Plug
821F02D66ABE
Pull down to refresh
How to manually add a new smart plug
If the plug that you wish to add is not listed, then please refer to help for guidance on installation.

2. Saisissez le mot de passe de votre prise intelligente et touchez « OK ». Touchez l'icône « Retour » sur l'écran suivant pour terminer.

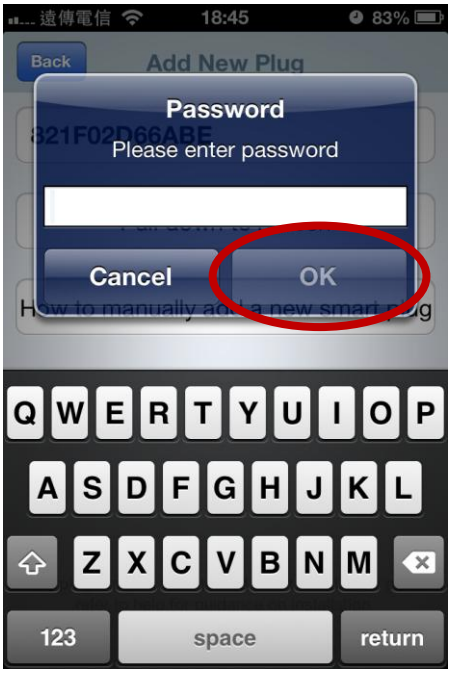

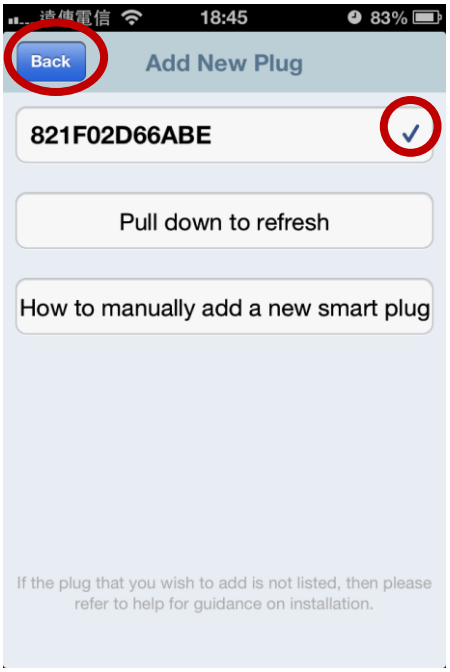
遠傳電信 18:45 83%
Back
Add New Plug
821F02D66ABE
Pull down to refresh
How to manually add a new smart plug
If the plug that you wish to add is not listed, then please refer to help for guidance on installation.

- **Android**

1. Dans l'écran principal d'EdiPlug, touchez l'icône « + » en haut à droite et sélectionnez une prise dans la liste.

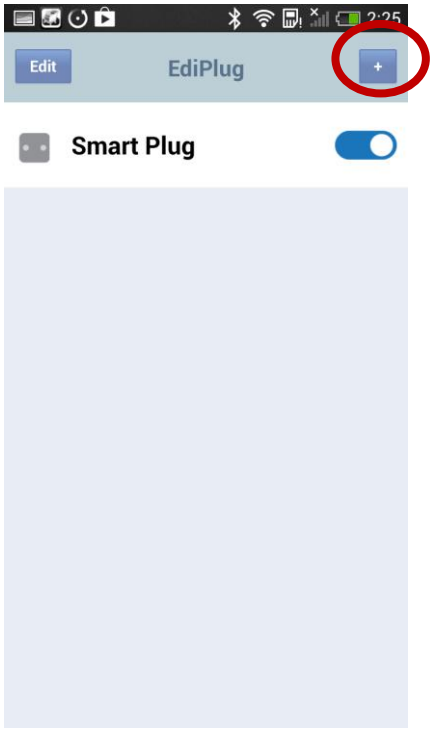

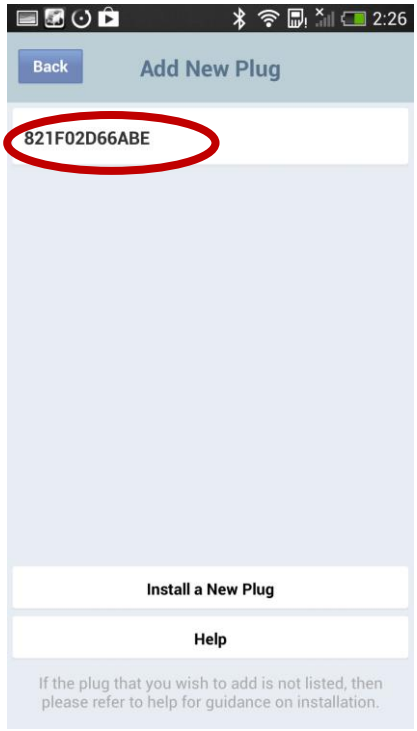
Back
Add New Plug
821F02D66ABE
Install a New Plug
Help
If the plug that you wish to add is not listed, then please refer to help for guidance on installation.

2. Saisissez le mot de passe de votre prise intelligente et touchez « OK ». Touchez « Retour » sur l'écran suivant pour terminer.

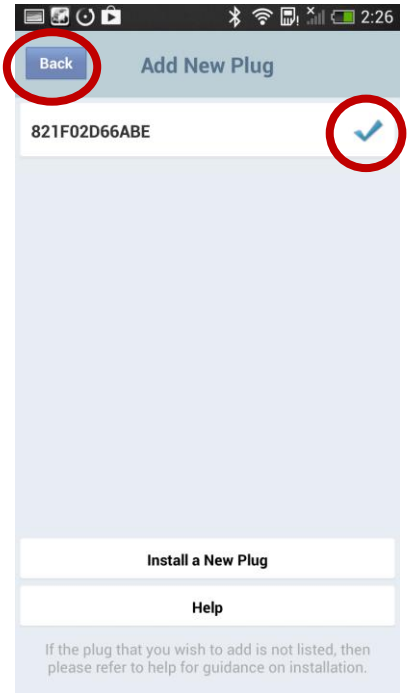
Back
Add New Plug
821F02D66ABE
Install a New Plug
Help
If the plug that you wish to add is not listed, then please refer to help for guidance on installation.

III-5 Configurer une programmation

- **iOS**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis sélectionnez la prise intelligente que vous voulez modifier dans la liste. Appuyez s ur ">" pour saisir les paramètres détaillés.

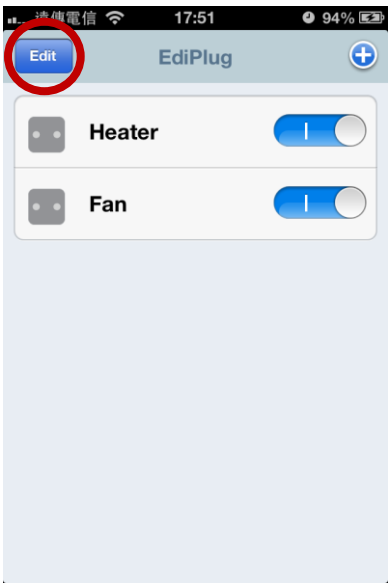

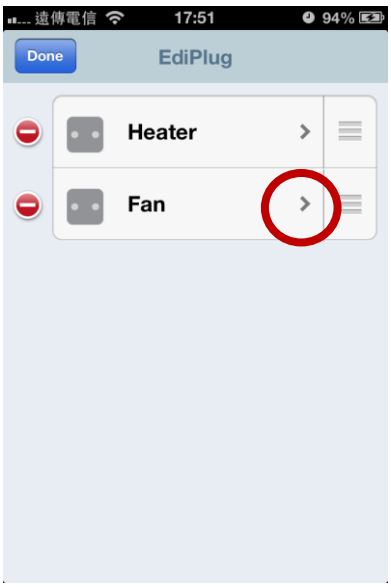

2. Sélectionnez "Programmation" puis activer ou désactiver les fonctions de commande en faisant glisser le bouton vers le bleu ou le blanc. Appuyez sur ">" à droite de l'écran si vous souhaitez modifier la programmation pour le jour en cours.

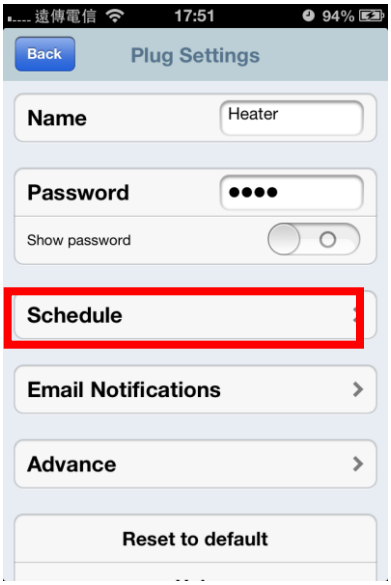

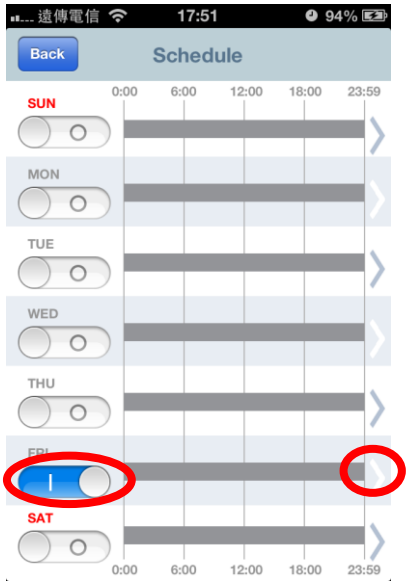

3. Sur la page de modification de la programmation, les zones en gris indiquent que la prise est "désactivée" et les zones en jaune indiquent que la prise est "activée". Faites glisser la flèche à droite sur la barre de l'heure pour sélectionner la plage d'activité de la prise et vers la gauche pour la plage d'inactivité. Appuyez sur la zone jaune ou grise pour régler le fonctionnement à cet horaire. Appuyez sur "Terminer" pour sauvegarder le paramétrage et revenir à la page précédente.

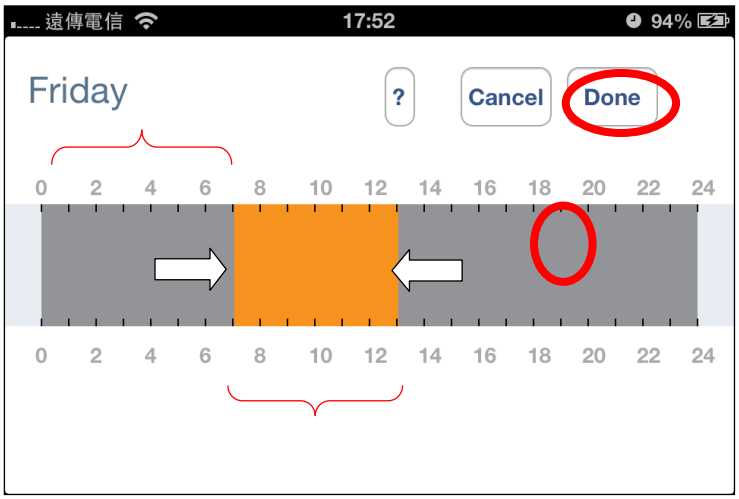

4. Sur la page de modification de la plage horaire détaillée, les zones en gris indiquent que la prise est "désactivée" et les zones en jaune indiquent que la prise est "activée". Faites glisser la flèche vers la droite pour activer et vers la gauche pour désactiver. Balayez vers le bas, là où se trouvent les flèches rouges pour passer à la plage horaire précédente, suivante. Appuyez sur "Terminer" pour sauvegarder le paramétrage et revenir à la page précédente.

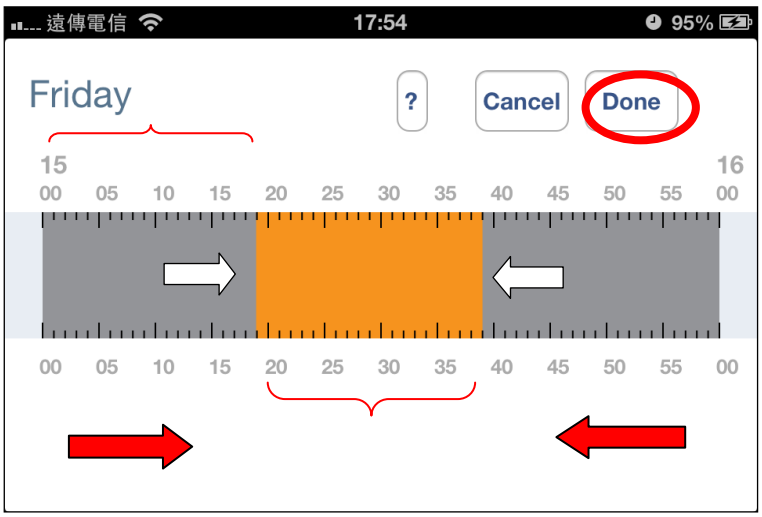

5. Appuyez sur la barre horaire, comme indiqué sur l'image de gauche, pour afficher les paramètres détaillés de programmation qui ont été définis comme indiqué sur l'image de droite.

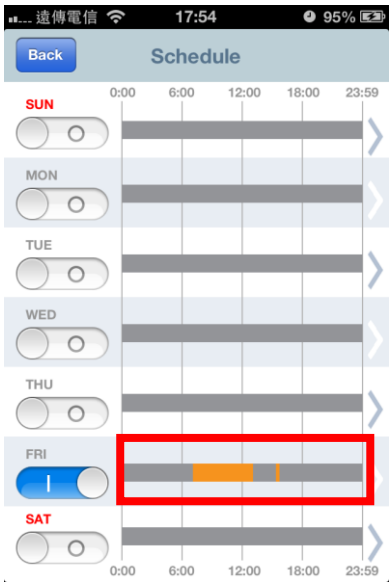

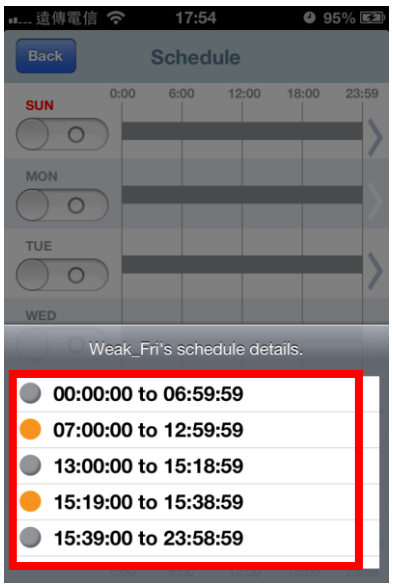

- **Android**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis sélectionnez le périphérique que vous voulez modifier. Appuyez sur ">" pour saisir les paramètres détaillés.

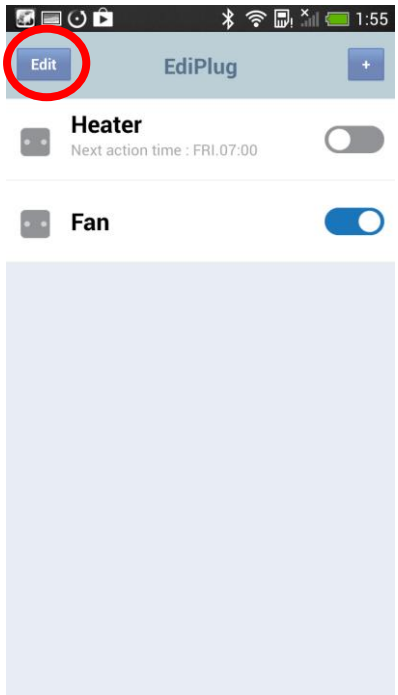

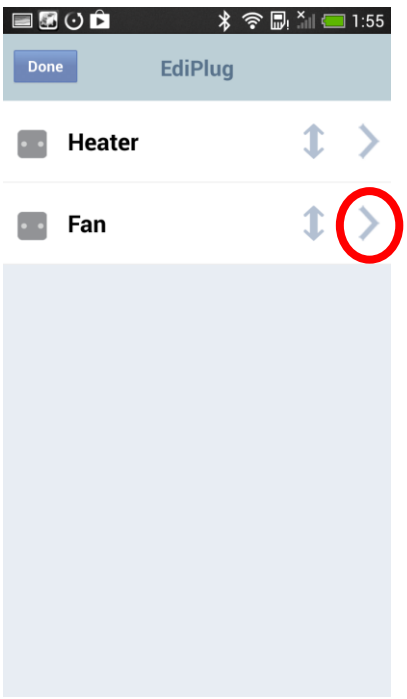

2. Sélectionnez "Programmation" puis activer ou désactiver les fonctions de commande en faisant glisser le bouton vers le bleu ou le blanc. Appuyez sur ">" à droite de l'écran si vous souhaitez modifier la programmation pour le jour en cours.

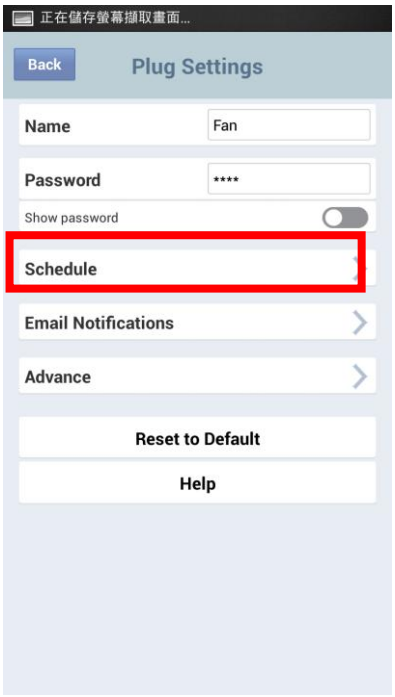

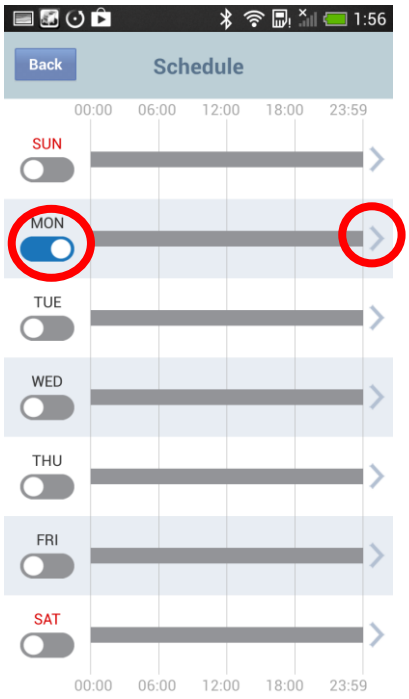

Sur la page de modification de la programmation, les zones en gris indiquent que la prise est "désactivée" et les zones en jaune indiquent que la prise est "activée". Faites glisser la flèche à droite sur la barre horaire pour activer et vers la gauche pour désactiver. Appuyez sur la zone jaune ou grise pour régler le fonctionnement à cet horaire. Appuyez sur "Terminer" pour sauvegarder le paramétrage et revenir à la page précédente.

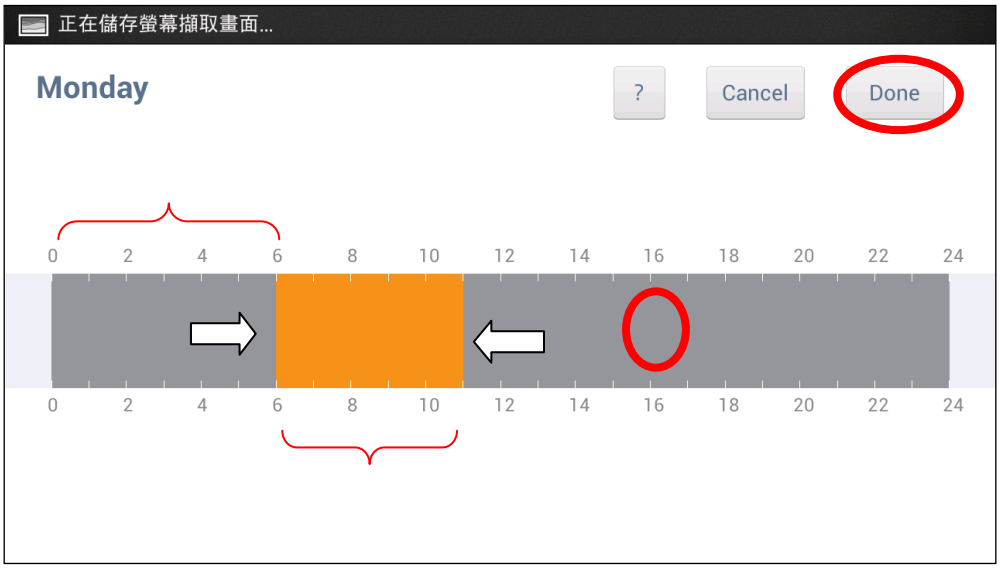

3. Sur la page de modification de la plage horaire détaillée, les zones en gris indiquent que la prise est "désactivée" et les zones en jaune indiquent que la prise est "activée". Faites glisser la flèche vers la droite pour activer et vers la gauche pour désactiver. Balayez vers le bas, là où se trouvent les flèches rouges pour passer à la plage horaire précédente, suivante. Appuyez sur "Terminer" pour sauvegarder le paramétrage et revenir à la page précédente.

1:57
Monday
?
Cancel
Done
12
13
00 05 10 15 20 25 30 35 40 45 50 55 00
00 05 10 15 20 25 30 35 40 45 50 55 00
On the editing detail period page, areas in gray indicate the switch is “off”, areas in yellow indicate the switch is “on”. Slide arrows right to switch “on” and left to switch “off”. Swipe the area under time bar to go to next or previous hour period. Press “Done” to save settings and go back to previous page.

4. Appuyez sur la zone jaune, comme indiqué sur l'image de gauche, pour afficher les paramètres détaillés de programmation qui ont été définis comme indiqué sur l'image de droite.

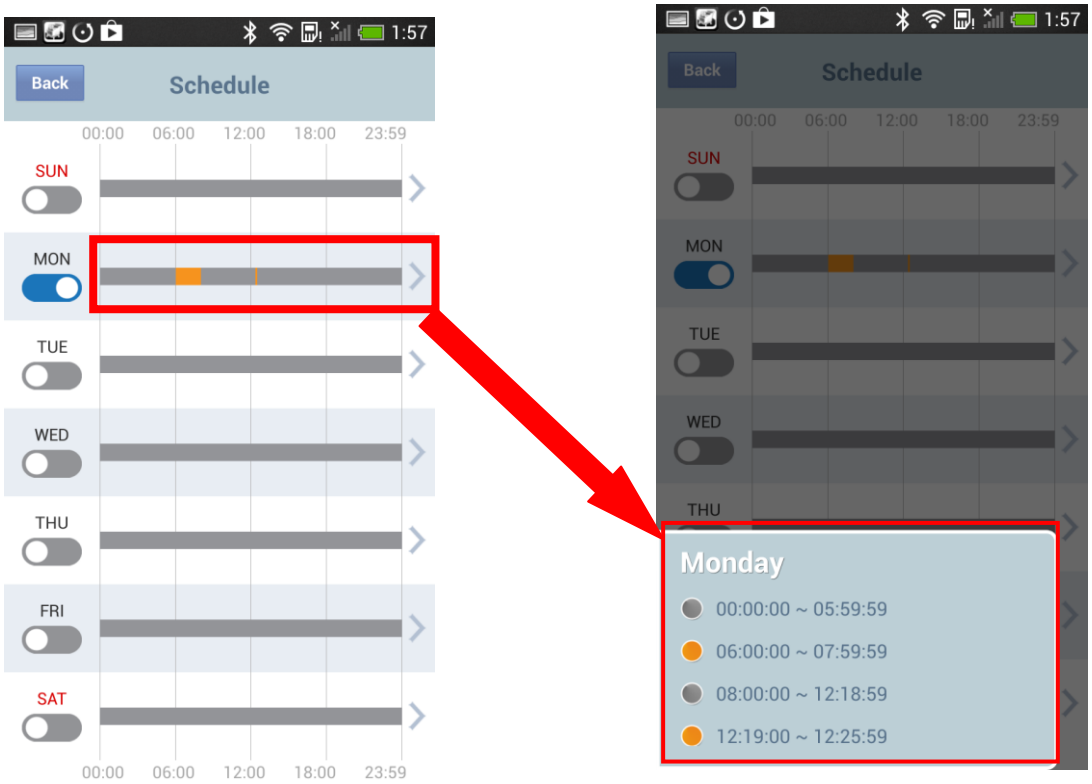

III-6 Notification

- **iOS**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis sélectionnez le périphérique pour lequel vous souhaitez paramétrer une notification. Appuyez sur ">" pour saisir les paramètres détaillés.

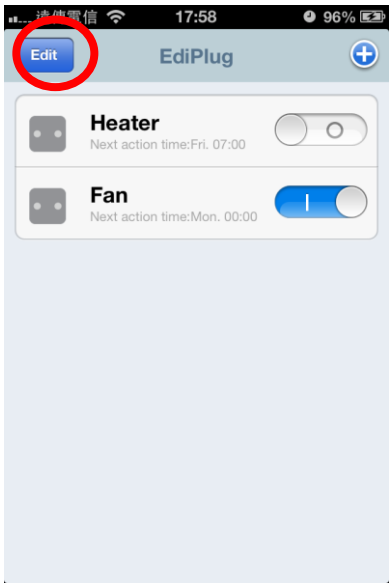

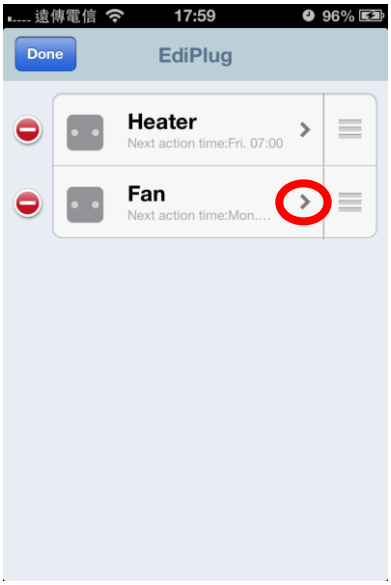

2. Sélectionnez "Notification" afin de paramétrer une notification par Email. Sélectionnez le service "Gmail" ou un autre service de messagerie.

- **Service Gmail**

Si vous choisissez Gmail pour envoyer une notification par Email, merci de saisir votre adresse et votre mot de passe de messagerie. Une fois terminé, passer "Action Notifications" sur "On" pour activer les notifications.

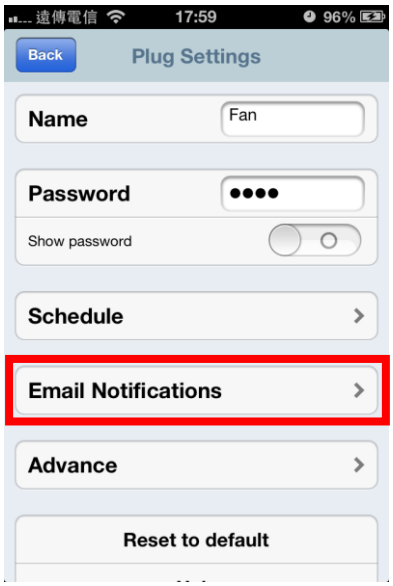

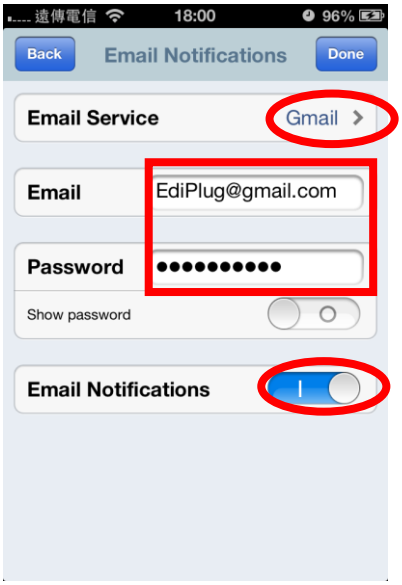

■ Autre service de messagerie

Si vous choisissez un autre service de messagerie, merci de renseigner tous les éléments comme indiqué et de passer "Action Notifications" sur "On" pour activer les notifications. Voir le tableau ci-dessous pour plus d'explications sur tous les points.

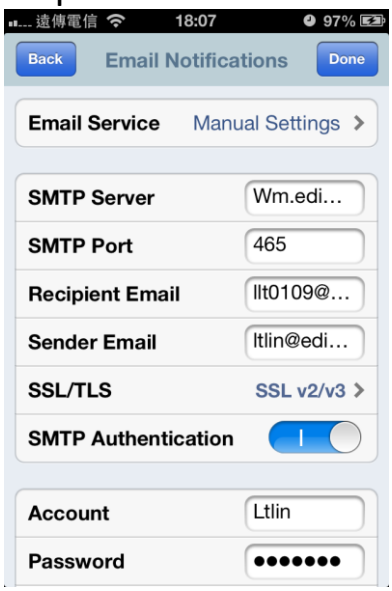

Service de messagerie	Sélectionnez "Défini par l'utilisateur" pour saisir les informations manuellement.
Serveur SMTP	Saisissez le nom d'hôte ou l'adresse IP du serveur SMTP (serveur sortant d'Email). Cette information peut vous être fournie par votre fournisseur de messagerie.
Port SMTP	Saisir le numéro du port SMTP du serveur sortant. La plupart des serveurs SMTP utilisent le port 25 mais certains utilisent des connexions cryptées avec le port 465. Cette information peut vous être fournie par votre fournisseur de messagerie.
Email destinataire	Saisissez l'adresse Email du destinataire ici.
Email expéditeur	Saisissez l'adresse Email de l'expéditeur ici afin d'éviter les problèmes avec le filtre de Spam.
SSL/TLS	Sélectionnez "SSL ou TLS" si votre serveur SMTP nécessite un cryptage. Consultez l'administrateur de votre serveur de messagerie en cas de doute.

Authentification SMTP	Sélectionnez "Activer" si votre serveur SMTP nécessite une authentification. Cette information peut vous être fournie par votre fournisseur de messagerie.
Compte	Saisissez le nom du compte SMTP si votre serveur nécessite une authentification. Cette information peut vous être fournie par votre fournisseur de messagerie.
Mot de Passe	Saisissez le mot de passe utilisé pour l'authentification du serveur SMTP.
Action Notifications	Sélectionner "ON" pour activer la notification ou "OFF" pour désactiver la fonction Action Notifications.

- **Android**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis sélectionnez le périphérique pour lequel vous souhaitez paramétrer une notification. Appuyez sur ">" pour saisir les paramètres détaillés.

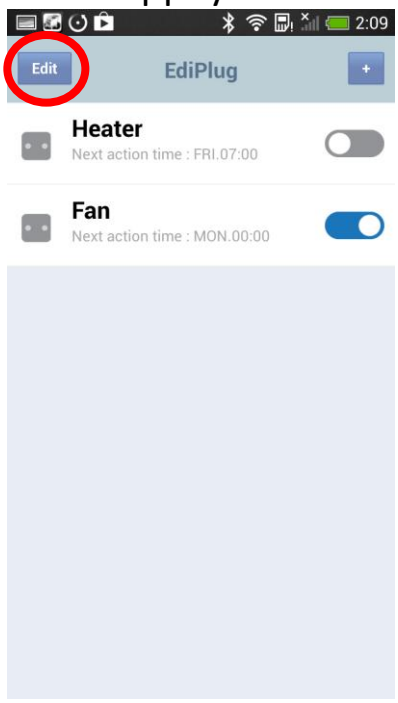

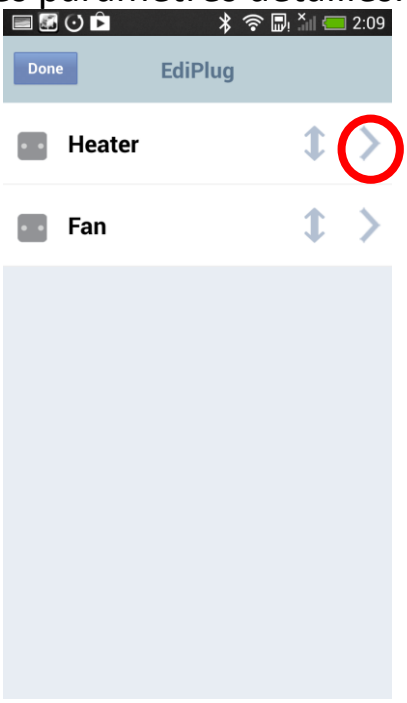

2. Sélectionnez "Notification" afin de paramétrer une notification par Email. Sélectionnez le service "Gmail" ou un autre service de messagerie.

- **Service Gmail**

  Si vous choisissez Gmail pour envoyer une notification par Email, merci de saisir votre adresse et votre mot de passe de messagerie. Une fois terminé, passer "Action Notifications" sur "On" pour activer les notifications.

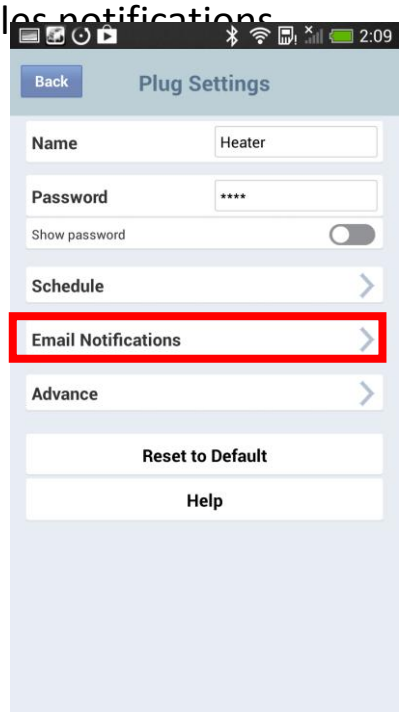

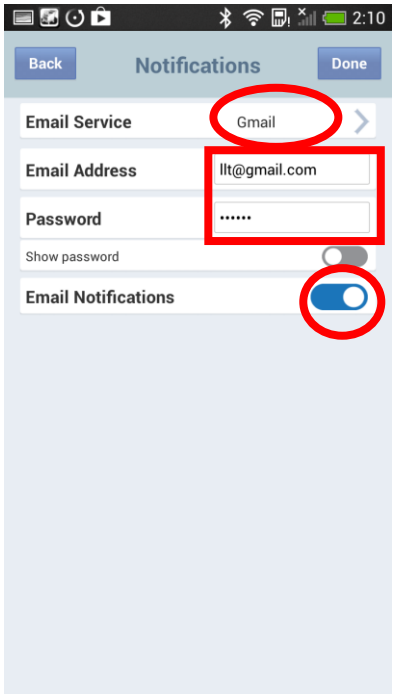

■ Autre service de messagerie

Si vous choisissez un autre service de messagerie, merci de renseigner tous les éléments comme indiqué et de passer "Action Notifications" sur "On" pour activer les notifications. Voir le tableau ci-dessous pour plus d'explications sur tous les points.

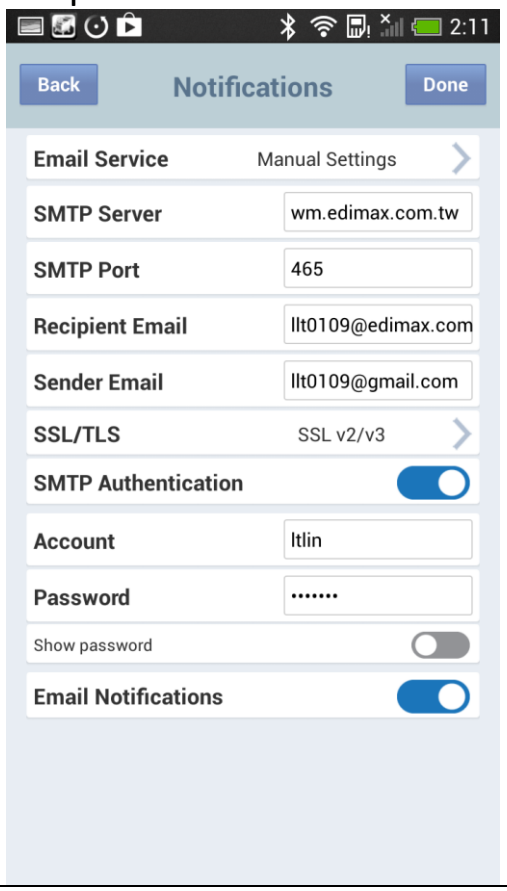

Service de messagerie	Sélectionnez "Défini par l'utilisateur" pour saisir les informations manuellement.
Serveur SMTP	Saisissez le nom d'hôte ou l'adresse IP du serveur SMTP (serveur sortant d'Email). Cette information peut vous être fournie par votre fournisseur de messagerie.
Port SMTP	Saisir le numéro du port SMTP du serveur sortant. La plupart des serveurs SMTP utilisent le port 25 mais certains utilisent des connexions cryptées avec le port 465. Cette information peut vous être fournie par votre fournisseur de messagerie.
Email destinataire	Saisissez l'adresse Email du destinataire ici.

Email expéditeur	Saisissez l'adresse Email de l'expéditeur ici afin d'éviter les problèmes avec le filtre de Spam.
SSL/TLS	Sélectionnez "SSL ou TLS" si votre serveur SMTP nécessite un cryptage. Consultez l'administrateur de votre serveur de messagerie en cas de doute.
Authentification SMTP	Sélectionnez "Activer" si votre serveur SMTP nécessite une authentification. Cette information peut vous être fournie par votre fournisseur de messagerie.
Compte	Saisissez le nom du compte SMTP si votre serveur nécessite une authentification. Cette information peut vous être fournie par votre fournisseur de messagerie.
Mot de Passe	Saisissez le mot de passe utilisé pour l'authentifiation du serveur SMTP.
Action Notifications	Sélectionner "ON" pour activer la notification ou "OFF" pour désactiver la fonction Action Notifications.

III-7 Supprimer la prise intelligente de la liste principale

- **iOS**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis cochez la case près de la prise que vous souhaitez supprimer. Appuyez ensuite sur "Supprimer" pour supprimer la prise.

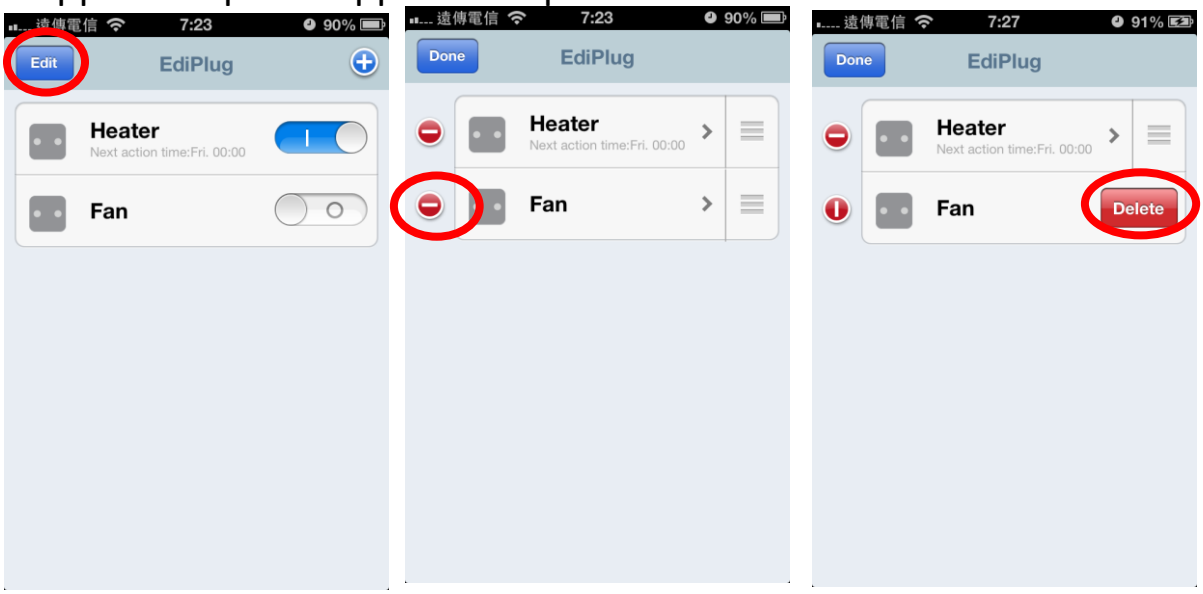

- **Android**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis maintenez enfoncée la prise que vous souhaitez supprimer. Appuyez ensuite sur "Oui" dans la boîte de message pour supprimer la prise.

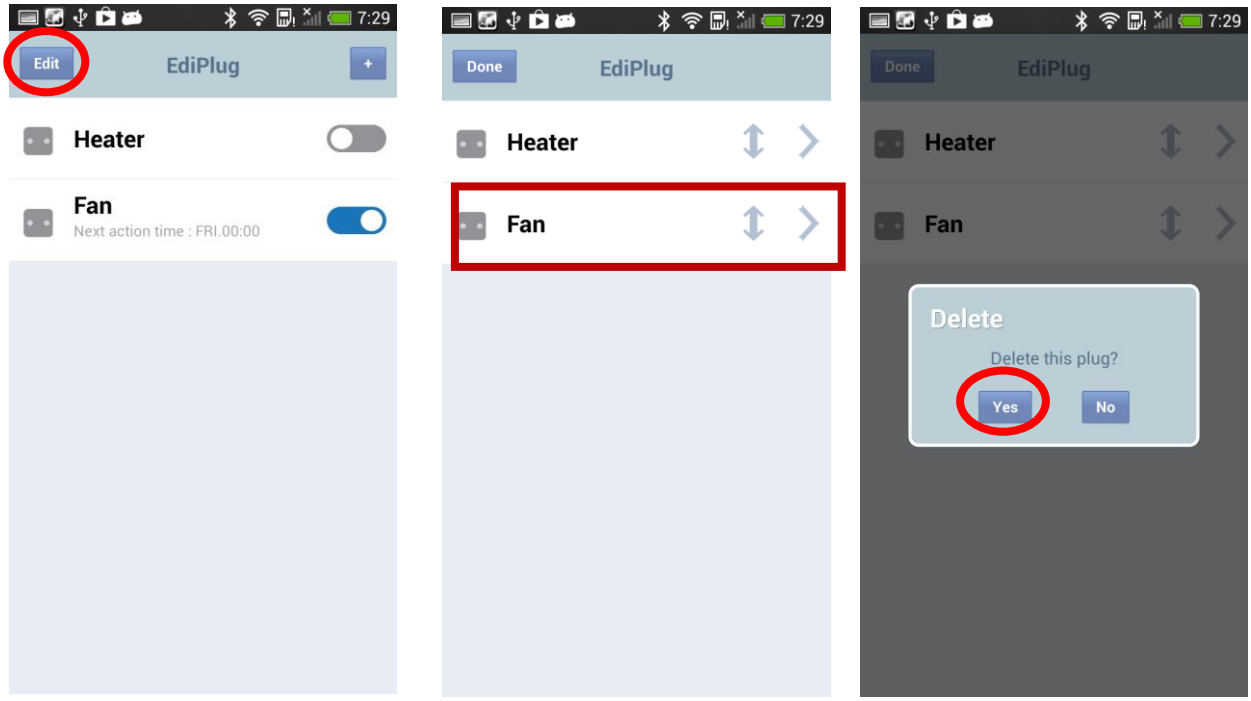

III-8 Réinitialisation des paramètres par défaut

- **iOS**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis sélectionnez le périphérique que vous voulez réinitialiser. Appuyez sur ">" pour saisir les paramètres détaillés.

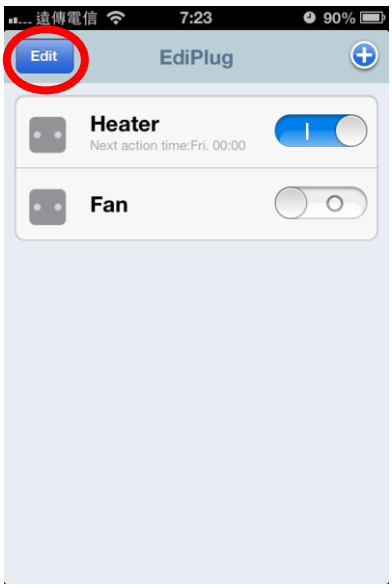

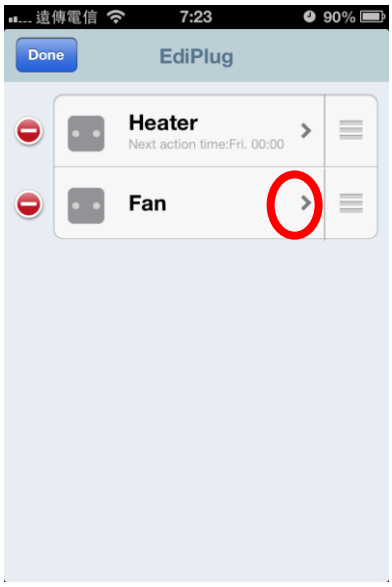

2. Appuyez ensuite sur "Réinitialiser aux paramètres par défaut" afin de réinitialiser.

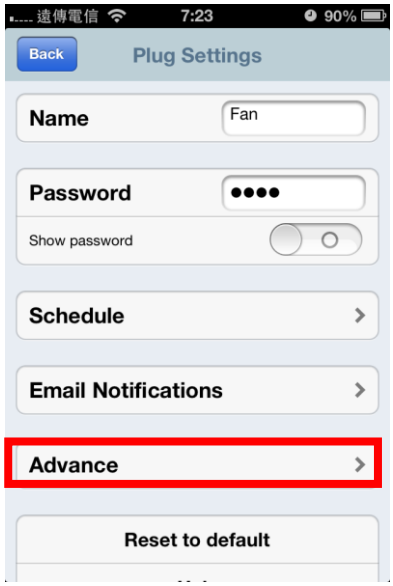

- **Android**

1. Sélectionnez « Modifier » dans l'écran principal d'EdiPlug, puis sélectionnez le périphérique que vous voulez réinitialiser. Appuyez sur ">" pour saisir les paramètres détaillés.

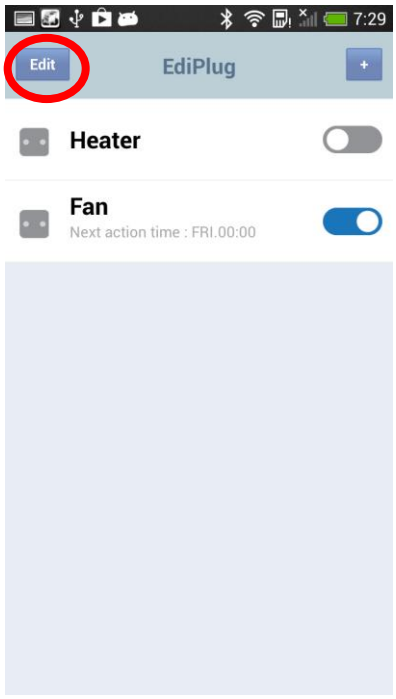

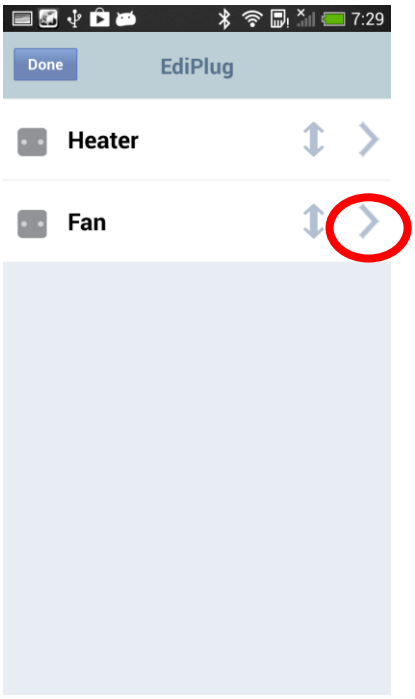

2. Appuyez ensuite sur "Réinitialiser aux paramètres par défaut" afin de réinitialiser.

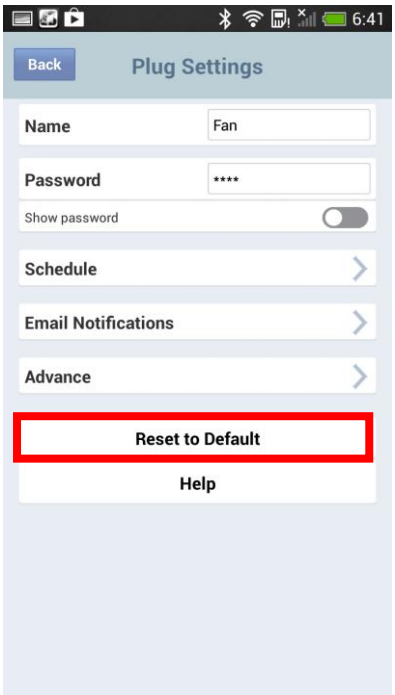

III-9 Mise à niveau du Micro-programme

Étape 1 :vous pouvez télécharger la dernière version de l'utilitaire "FWUpgradeTool" sur ttp://www.edimax.com/FWUpgradeTool.htmlvers votre PC ou orfinateur portable.

Étape 2 : Vérifiez que votre prise intelligente est déjà connectée au même réseau que votre PC ou votre ordinateur portable.

Étape 3 : Accédez à l'utilitaire "FWUpgradeTool" et choisissez la prise à mettre à jour et vérifiez son état pour savoir si elle peut être mise à jour ou si elle dispose déjà de la dernière version. Si vous ne trouvez pas la prise que vous recherchez, vous pouvez utiliser la fonction de recherche.

Étape 4 : Après avoir trouvé la prise que vous voulez mettre à jour, cliquez sur "Mettre à jour". Avant de mettre à jour le micro-programme, vous devez connecter votre PC ou votre ordinateur portable au même réseau que celui de la prise intelligente installée et que vous souhaitez mettre à jour. Accédez ensuite à l'utilitaire de téléchargement et à l'écran comme indiqué ci-dessous.

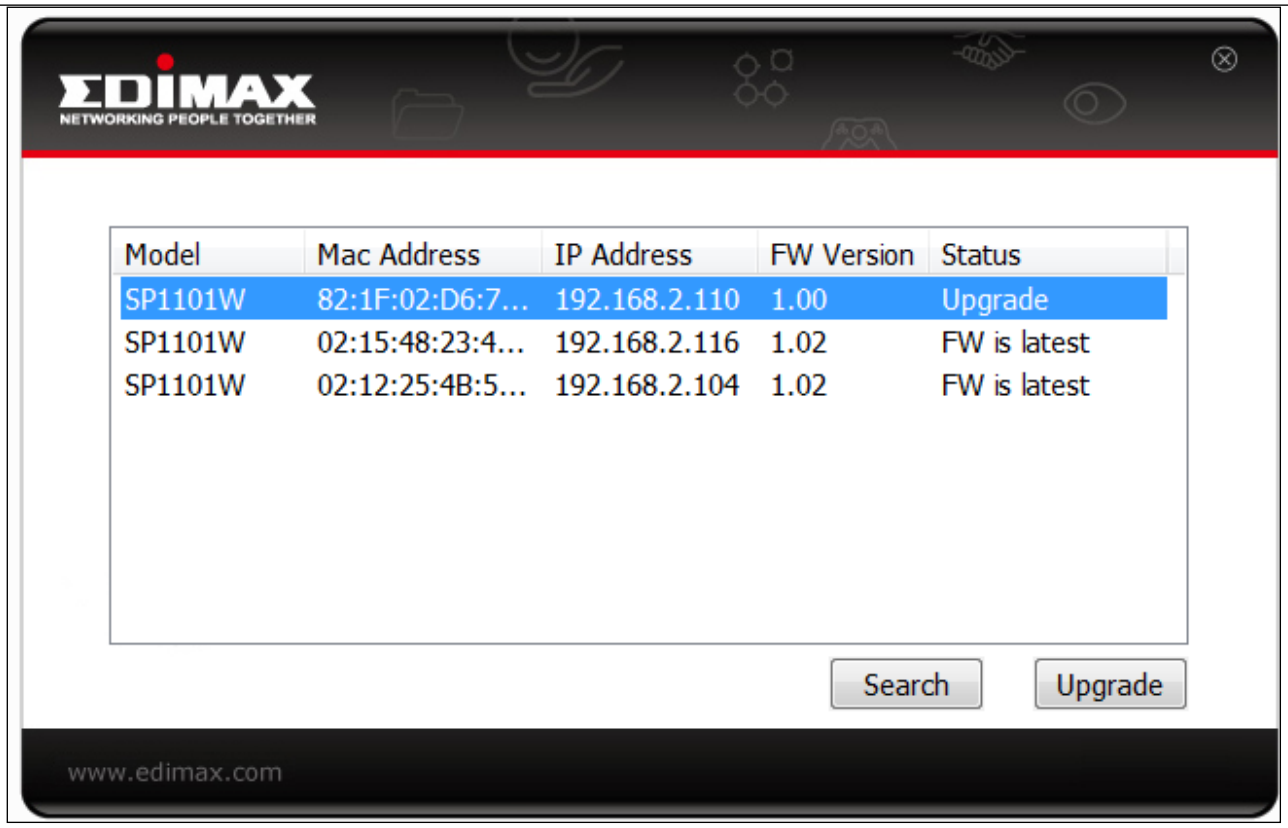

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communications Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

Federal Communications Commission (FCC) RF Exposure Requirements

SAR compliance has been established in the laptop computer(s) configurations with PCMCIA slot on the side near the center, as tested in the application for certification, and can be used in laptop computer(s) with substantially similar physical dimensions, construction, and electrical and RF characteristics. Use in other devices such as PDAs or lap pads is not authorized. This transmitter is restricted for use with the specific antenna tested in the application for certification. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use None

EU Declaration of Conformity

English: This equipment is in compliance with the essential requirements and other relevant provisions of Directive 2006/95/EC, 2011/65/EC.

Français: Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 2006/95/CE, 2011/65/CE.

Čeština: Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 2006/95/ES, 2011/65/ES.

Polski: Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 2006/95/EC, 2011/65/EC..

Română: Acest echipament este în conformitate cu cerinţele esenţiale şi alte prevederi relevante ale Directivei 2006/95/CE, 2011/65/CE.

Русский: Это оборудование соответствует основным требованиям и положениям Директивы 2006/95/EC, 2011/65/EC.

Magyar: Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (2006/95/EK, 2011/65/EK).

Türkçe: Bu cihaz 2006/95/EC, 2011/65/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.

Українська: Обладнання відповідає вимогам і умовам директиви 2006/95/EC, 2011/65/EC.

Slovenčina: Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 2006/95/ES, 2011/65/ES.

Deutsch: Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 2006/95/EC, 2011/65/EC.

Español: El presente equipo cumple los requisitos esenciales de la Directiva 2006/95/EC, 2011/65/EC.

Italiano: Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 2006/95/CE, 2011/65/CE.

Nederlands: Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 2006/95/EC, 2011/65/EC..

Português: Este equipamento cumpre os requesitos essênciais da Directiva 2006/95/EC, 2011/65/EC.

Norsk: Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 2006/95/EC, 2011/65/EC.

Svenska: Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 2006/95/EG, 2011/65/EG.

Dansk: Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 2006/95/EC, 2011/65/EC.

suomen kieli: Tämä laite täyttää direktiivien 2006/95/EY, 2011/65/EY oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN AT BE CY CZ DK EE FI FR DE GR HU IE IT LV LT LU MT NL PL PT SK SI ES SE GB IS LI NO CH BG RO TR

N20379

АЯ46

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directive 2006/95/EC, and directive 2011/65/EC(RoHS) .

Equipment: Smart Plug Switch
Model No.: SP-1101W

The following European standards for essential requirements have been followed:

ETSI EN 300 328 V1.7.1: 2006

ETSI EN 301 489-17 V2.1.1: 2009

ETSI EN 301 489-1 V1.9.2: 2011

EN 55022: 2010

EN 61000-3-2: 2006+A2: 2009

EN 61000-3-3: 2008

EN 60950-1: 2006+A11: 2009+A1: 2010+A12:2011

IEC 60590-1: 2005+A1: 2009

Edimax Technology Europe B.V.
Nijverheidsweg 25,
5683 CJ BEST
THE NETHERLANDS

a company of :
Edimax Technology Co., Ltd.,
No. 3, Wu Chuan 3rd Road,
Wu-Ku Industrial Park, New
Taipei City, Taiwan

Printed Name: Vivian Ma
Title: Director
Edimax Technology Europe B.V

Date of Signature: November , 2013
Signature:

Printed Name: Albert Chang
Title: Director
Edimax Technology Co., Ltd.

Notice According to GNU General Public License Version 2

This product includes software that is subject to the GNU General Public License version 2. The program is free software and distributed without any warranty of the author. We offer, valid for at least three years, to give you, for a charge no more than the costs of physically performing source distribution, a complete machine-readable copy of the corresponding source code.

Das Produkt beinhaltet Software, die den Bedingungen der GNU/GPL-Version 2 unterliegt. Das Programm ist eine sog. „Free Software“, der Autor stellt das Programm ohne irgendeine Gewährleistungen zur Verfügung. Wir bieten Ihnen für einen Zeitraum von drei Jahren an, eine vollständige maschinenlesbare Kopie des Quelltextes der Programme zur Verfügung zu stellen – zu nicht höheren Kosten als denen, die durch den physikalischen Kopiervorgang anfallen.

GNU GENERAL PUBLIC LICENSE
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation’s software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author’s protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors’ reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone’s free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The ‘“Program’“, below, refers to any such program or work, and a ‘“work based on the Program’“ means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term ‘“modification’“.) Each licensee is addressed as ‘“you’“.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License.

Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and '"any later version'", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM '"AS IS'" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM

EDIMAX
NETWORKING PEOPLE TOGETHER